


Boost Line Adapter for Silicone Couplers

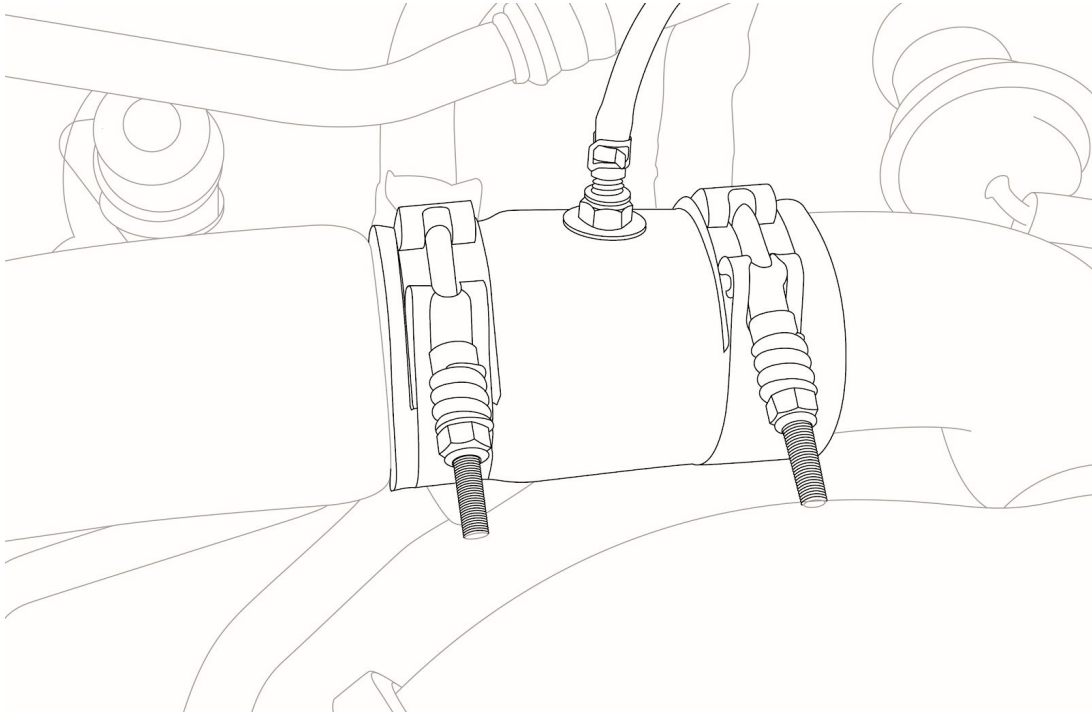

1. Find an unobstructed location on a silicone coupler for your intercooler piping that has at least 1" of clearance between both ends of the pipe.
2. Ensure that there is approximately 2" of clearance for the adapter and boost line to come through the silicone coupler, and mark your location.
3. Loosen the factory clamps holding on the silicone coupler to the intercooler pipe.
4. Remove the silicone coupler from the pipe, and drill a 5/16" hole in the silicone coupler at the marked location.
5. Push the Boost Line Adapter through the hole in the silicone coupler from the inside, making sure that the O-ring is seated in the groove.
6. Place the washer over the Boost Line Adapter, followed by the nut.
7. Using ½" and 22mm wrenches, tighten the Boost Line Adapter.
8. Reinstall the silicone coupler with Boost Line Adapter back into the vehicle and tighten the clamps.
9. Slide the ⅜" ID silicone boost line over the Boost Line Adapter until seated all the way, and secure using the hose clamp included with the gauge.
10. Route the silicone boost line to the gauge location and secure away from heat and moving parts using wire ties.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.