


5.9 Cummins Coolant Temperature Sensor Adapter

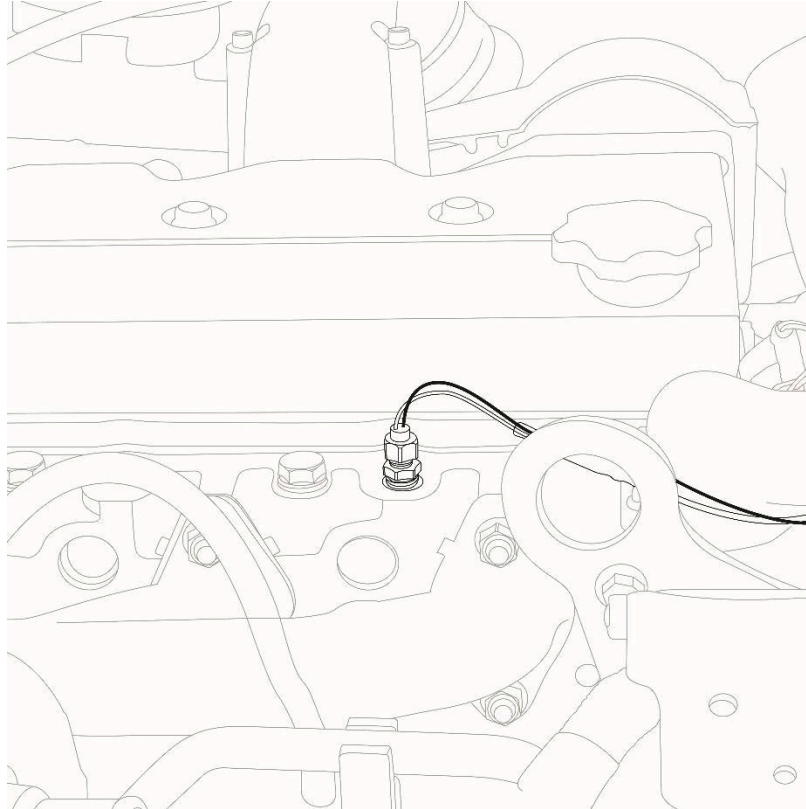

1. Ensure that the engine coolant has cooled off and remove the factory plug located on the head using a 1/4" Allen key.
 - Have a drain pan ready to catch any lost coolant.
2. Wrap Teflon tape around the Coolant Temperature Sensor Adapter and thread it into the port. Tighten with a 14mm wrench.
3. Wrap Teflon tape around the Coolant Temperature Sensor and thread it into the adapter. Tighten with a 14mm wrench.
4. Place the sensor harness into the sensor and run to the gauge location, making sure that the wire is secure from moving parts and heat.
5. Top off any coolant that may have been lost.
6. Start the vehicle and allow time to warm up, purging any air that is in the system. Check for leaks.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.