

Oil Adapter for Ford 5.0 Coyote



1. Locate and remove the Factory Oil Pressure Sensor using a 13/16" Deep Socket.
2. Thread the Gauge Oil Pressure or Temperature Sensor into the Oil Adapter and tighten using a 22mm and 1" Wrench.
3. Thread the Gauge Sensor and Adapter Assembly into the Engine and tighten so that the Port is accessible using a 1" Wrench.
4. Wrap Teflon Tape around the Factory Oil Pressure Sensor and thread into the Oil Adapter and tighten using a 13/16" Deep Socket.
5. Route the Oil Sensor Harness through the Engine Bay and through the Firewall up to the Gauge and secure using Zip Ties away from moving parts and heat.

GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.