


Water Temperature Sensor Attachment

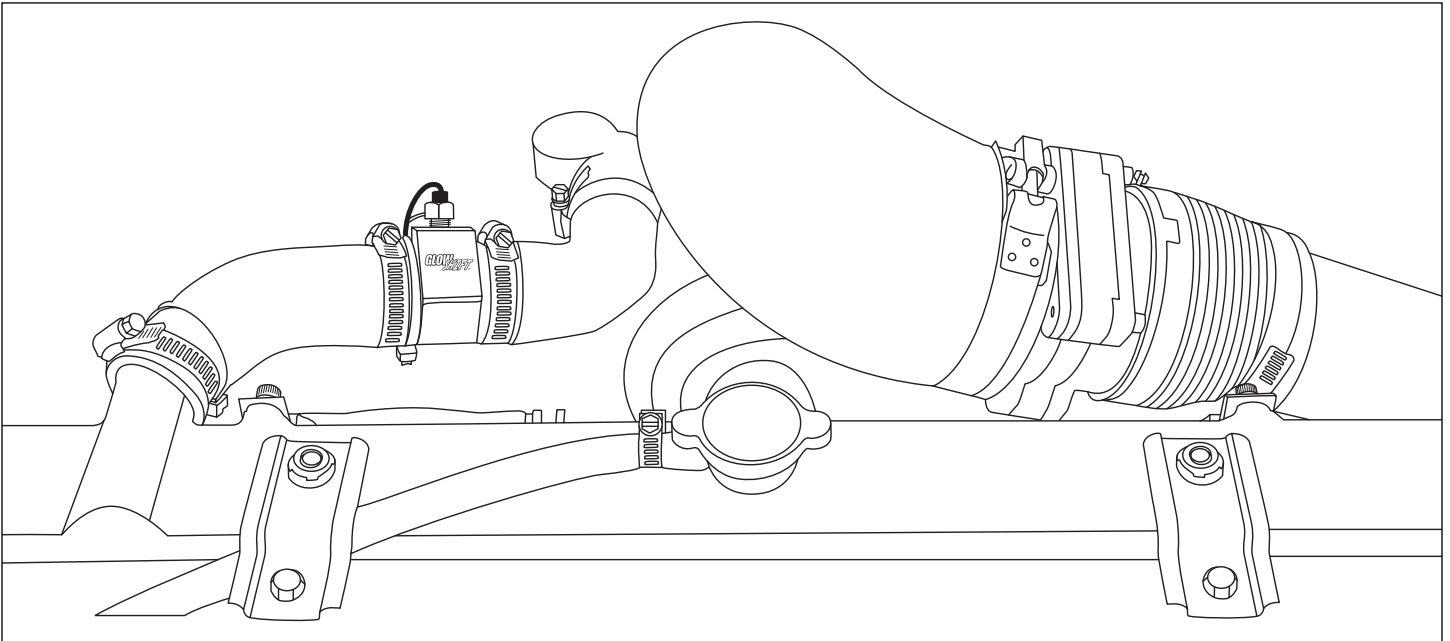

1. Identify the coolant hose where you want to install your water temperature sensor adapter.
 - **Note:** You want to install the adapter to the coolant hose that does not have the thermostat connected to the end of it.
2. Locate a relatively straight section of the coolant hose and cut it all the way through. Make sure Engine is cool.
 - **Note:** Be sure to have a catch pan under the car to catch any coolant that may spill.
3. Install the temperature sensor into the adapter ensuring it is properly tightened.
 - **Note:** Be sure to use Teflon tape on the temperature sensor threads to ensure no leaks occur.
4. Insert the two included hose clamps over the two cut ends of the hose and place the water temperature sensor adapter in between the two cut ends of the hose and securely tighten it into place with the hose clamps.
5. Once the adapter and sensor are installed, refill the radiator with new coolant to the factory specifications and let the engine run until it reaches operating temperature to ensure there are no leaks.

All Glowshift Products are subject to the Glowshift Limited Warranty. Please Visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.