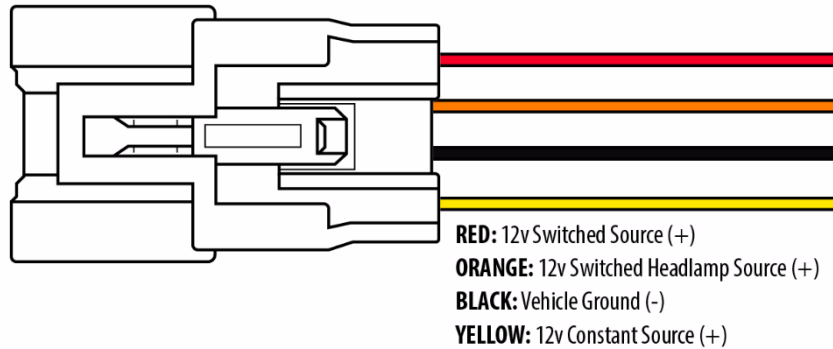


**Plug-In Wire Harness Instructions for 2002-2005 Subaru Impreza WRX****⚠WARNING:** Prior to the installation of this dashboard gauge pod, disconnect the negative side of your vehicle's battery.

1. Using a trim removal tool, carefully remove the clock trim from your vehicle. Insert the tool into the rear seam of the trim, releasing the spring clips.
2. Disconnect the wiring harness and remove the clock from the dashboard.
3. Splice the gauge harness wires to the pigtail wires using the included butt connectors.
  - Yellow is for a constant 12 volt source
  - Red is for an ignition 12 volt source
  - Orange is for a 12 volt headlamp source
  - Black is for ground

Note: This harness is intended to be used to install aftermarket gauges into a dash mounting pod.

4. Continue to connect the signal wires to the gauges according to the gauge instructions.
5. Mount the gauges into the dash mounting pod and secure to the dash.
6. Reconnect the negative side of the vehicle's battery and check for proper function.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.