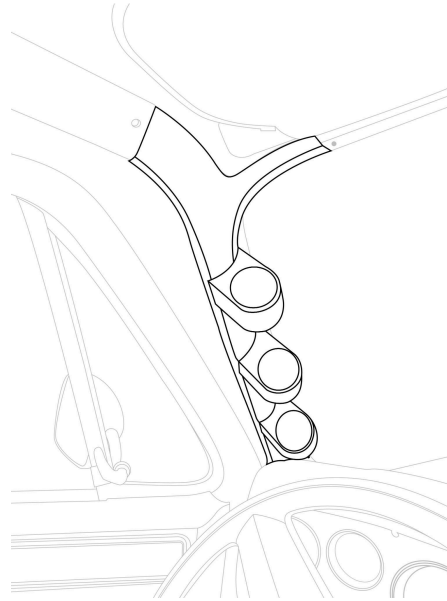


**Triple Pillar Gauge Pod for 1982-1986 Ford F-Series**

**Note: This pillar pod mounts directly otop of your vehicle's factory A-pillar and is not a complete replacement.**

1. Carefully remove the factory A-pillar from your vehicle by removing the Phillips head screws.
2. **OPTIONAL STEP** : Our pillar pods can be painted using ABS plastic paint. Be sure to scuff the surface of the pod using a scuff pad. This will allow the paint to properly adhere to the surface of the pod. Before applying paint to the pillar pod, ensure it is cleaned off and that there is no residue on the pod from scuffing it. Apply 2-3 even coats, waiting 10 minutes between coats to dry.
  - Be sure to follow the paint manufacturer's instructions while painting, including proper safety procedures.
  - Be advised, you will not be eligible to return this pod for a refund if painted.
3. Place the gauge pod on top of the factory A-Pillar and use the included fasteners to secure them together.
  - Drilling pilot holes will make installation of the fasteners easier.
4. Use a scoring tool to mark the location on your factory A-pillar where the wires will pass through the factory A-pillar, and drill 3 holes using a step bit.
5. Install your gauges into the pod by following the instructions included with them.
6. Connect the gauge wires to the power and sensor wires as per the instructions that are included with your gauges.
7. Install the gauge pod to your factory A-pillar using the provided fasteners by screwing them into the factory mounting holes. Tighten with a Phillips head screwdriver.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.