


Pillar Gauge Pod for 2003-2009 Dodge Ram Cummins



Note: This pillar pod is a complete replacement and will require removal of the factory A-pillar trim. Be sure to store the factory A-pillar trim in a safe location when done.

1. **⚠ WARNING :** Prior to installing the pillar pod, make sure your vehicle does not have side curtain airbags.
2. Partially remove the weather stripping surrounding the factory A-Pillar.
3. Remove the factory A-pillar trim by removing the bolt covers using a flathead screwdriver; use a 10mm socket wrench to remove the bolts.
4. Install your gauges into the pod by following the instructions that are included with them.
5. Connect the gauge wires to their sensors and power by following the instructions that are included with the gauges.
6. Install the pillar pod to the factory A-pillar support using the included bolt. This bolt installs through the predrilled hole on the pod.
 - To ensure a proper fit, thread the included bolt using a 4mm Allen wrench into the vehicle A-Pillar support, but do not completely tighten.
7. Reinstall the weather strip and adjust the pillar pod so that it lines up properly to the windshield. Once aligned, tighten the bolt.

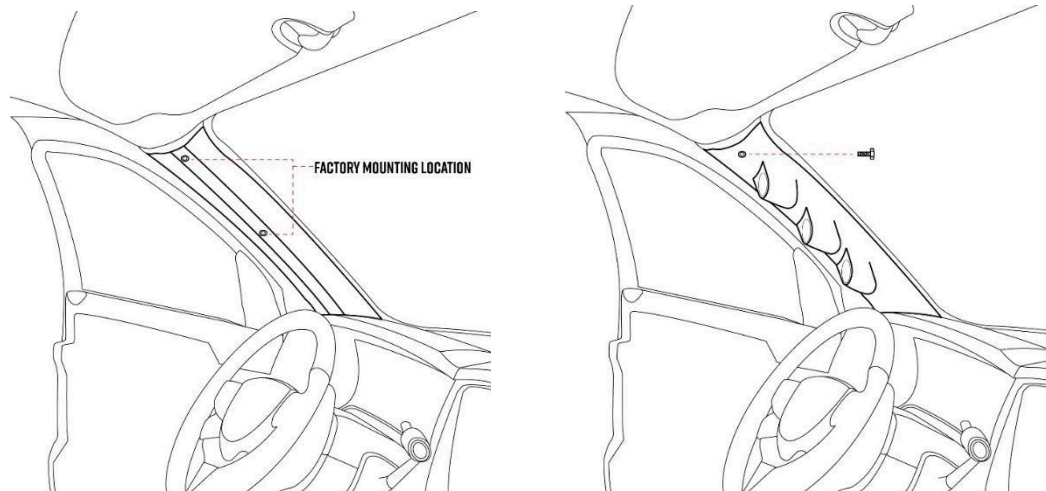

TECH TIP Please refer to this video for any further adjustment issues. <https://www.youtube.com/watch?v=5ZJcuQ0UnF4>

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.