


Triple Pillar Gauge Pod for 2007-2013 Chevy/GMC Full Size Truck

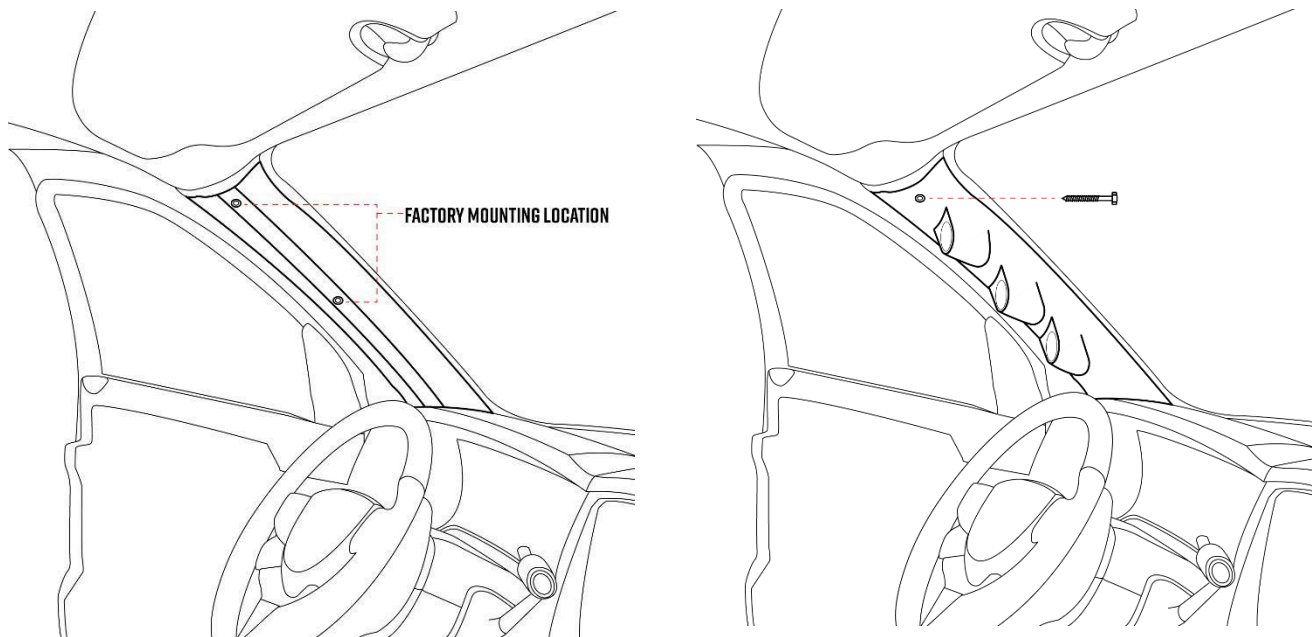

Note: This pillar pod is a complete replacement and will require removal of the factory A-pillar trim. Be sure to store the factory A-pillar trim in a safe location when done.

1. **⚠ WARNING :** Prior to installing this pillar pod, please make sure your truck does not have side curtain airbags.
2. Partially remove the weather stripping surrounding the factory A-Pillar.
3. Remove the factory A-pillar trim by removing the bolt cover using a flathead screwdriver; use a 7mm socket wrench to remove the bolt.
4. Once removed, the speaker can be unplugged by releasing the speaker connector clip.
5. **➤ OPTIONAL STEP :** Our pillar pods can be painted using ABS plastic paint. Be sure to scuff the surface of the pod using a scuff pad. This will allow the paint to properly adhere to the surface of the pod. Before applying paint to the pillar pod, ensure it is cleaned off and that there is no residue on the pod from scuffing it. Apply 2-3 even coats, waiting 10 minutes between coats to dry.
 - Be sure to follow the paint manufacturer's instructions while painting, as well as proper safety procedures.
 - Please be advised that you will not be eligible to return this pod for a refund if painted.
6. For factory A-pillar speaker removal and installation:
 - Remove the factory speaker from the factory trim by pressing on the retaining tabs.
 - Clip the factory speaker into the speaker location on the new A-pillar pod and press firmly to secure the retaining tabs.
7. Install your gauges into the pod by following the instructions that are included with them.
8. Connect the gauge wires to their sensors and power by following the instructions that are included with the gauges.
9. Install the pillar pod to the factory A-pillar support using the included screw. This screw installs through the predrilled hole on the pod.
 - To ensure a proper fit, thread the included screw into the vehicle A-Pillar support, but do not completely tighten it. Reinstall the weather strip and adjust the pillar pod so that it lines up properly to the windshield. Once aligned, tighten the screw using a Phillips-Head Screwdriver.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.