


3in1 60mm Gauge Pillar Pod Mounting Instructions

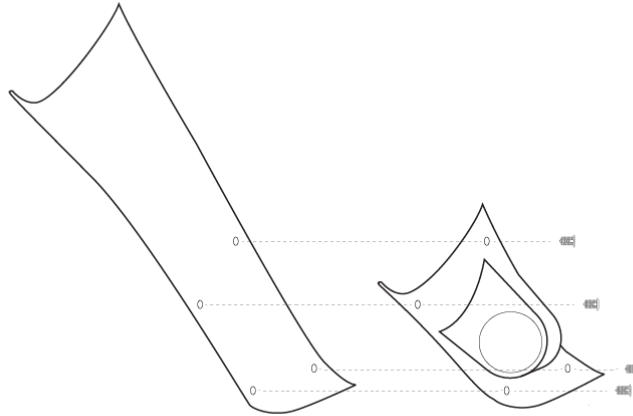

1. **This gauge pod mounts directly overtop of your vehicle's factory A-pillar and is designed for you to keep using the grab handle if equipped.**
2. Test fit the gauge pod to the vehicle's factory A-pillar trim in the location where you are planning to mount it.
 - On some applications the grab handle must first be loosened or removed in order to fit the pod.
3. Carefully remove the factory A-pillar. We strongly recommend referring to your vehicle's repair manual for the proper procedure on removing the factory A-pillar trim.
4. Use a scoring tool to mark the location on your factory A-pillar where you plan to mount the gauge pod with the included flush mount push in fasteners.
5. Our gauge pods can be painted using ABS plastic paint. If you decide to paint the pod, be sure to scuff the surface of the gauge pod using a scuff pad. This will allow the paint to properly adhere to the surface. Before applying paint to the gauge pod, make sure that it is cleaned off and that there is no residue on the pod from scuffing it. Apply 2-3 even coats, waiting 10 minutes between coats to dry.
 - Be sure to follow the paint manufacturer's instructions while painting, in addition to proper safety procedures.
 - Please be advised, if you decide to paint this pod you will not be eligible to return it for a refund.
6. Install your gauges into the pod by following the instructions included with them. Once the gauges are installed, place the gauge pod against the factory A-pillar to see how much clearance is available for both the gauges and wire harnesses.
 - It may be necessary to drill a hole in the factory A-pillar to allow the wires from the gauge to pass through.
7. Connect the gauge wires to the power and sensor wires as per the instructions included with your gauges.
8. With the gauge pod placed on the factory A-pillar, make sure it is properly aligned with the scoring marks you made in Step 2 and drill a 7/32" hole at the marked locations through the pod and the factory A-pillar.
9. Install the gauge pod to the factory A-pillar using the provided fasteners, pressing them in firmly until they are flush.
 - If you do not want to use the fasteners, you can also use Velcro or double-sided tape to mount the gauge pod to the A-pillar.
10. In the event you have to remove the pillar pod from the factory trim, carefully remove the fasteners using a panel pop tool.
11. Reinstall your vehicle's factory A-pillar with the installed gauge pod.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.