

6 Gauge Replacement Cluster for 1973-1987 Chevrolet C10





1. Start by removing the screws securing the factory steering column filler panel and cluster trim with a Phillips head screwdriver and remove the factory cluster trim.
2. You will need to cut a hole in the new cluster for the 1973-1980 headlight and wiper switches, or the 1981-1987 headlight switch. Please cut out the correct template provided with these instructions for your year range and use it as a guide to cut the holes.



Note: If you have to print the template, be sure to scale the document so that the reference square measures 1" to make sure the template is the correct size.

1. As another option you can measure and mark the location. Start by measuring the distance to the center of the headlight switch hole in the factory cluster. Then, using tape and a marker, mark out the same distance on the new cluster.
2. Once the location has been marked, drill a hole using a 1 3/8" hole saw.
3. If you have a 1973-1980 truck, measure and mark the location of the wiper switch on the new cluster and cut out with a small rotary cutting tool.
4. If your particular truck does not come with a/c vents, install the included a/c vent block off plate and secure it using the included screws.
5. If your truck does come with a/c vents, remove the a/c duct from the factory cluster and install it into the new cluster using the included screws.
6. Then, install the lower block-off plate and secure it using the included screws.
7. Install each gauge into the pod using the mounting brackets, washers, and nuts. Be sure not to overtighten the nuts as it will damage the gauges.
8. Once all of the gauges have been installed, insert the wiring harnesses into each designated gauge.
9. Remove the factory gauge lens, inner bezel and gauge faces from the stock cluster assembly using a 1/4" socket. The factory cluster assembly must remain to hold the turn signal sockets and the PRNDL indicator.
10. Feed the opposite end of the wiring harness down through the dash and insert the new cluster into the dash. Secure it using the factory screws.
11. Install the new steering column filler panel and secure with the factory screws.

All GlowShift Products are subject to the GlowShift Limited Warranty. Please visit <https://www.glowshiftdirect.com/warranty-policies> to review complete Warranty, Terms, and Conditions.

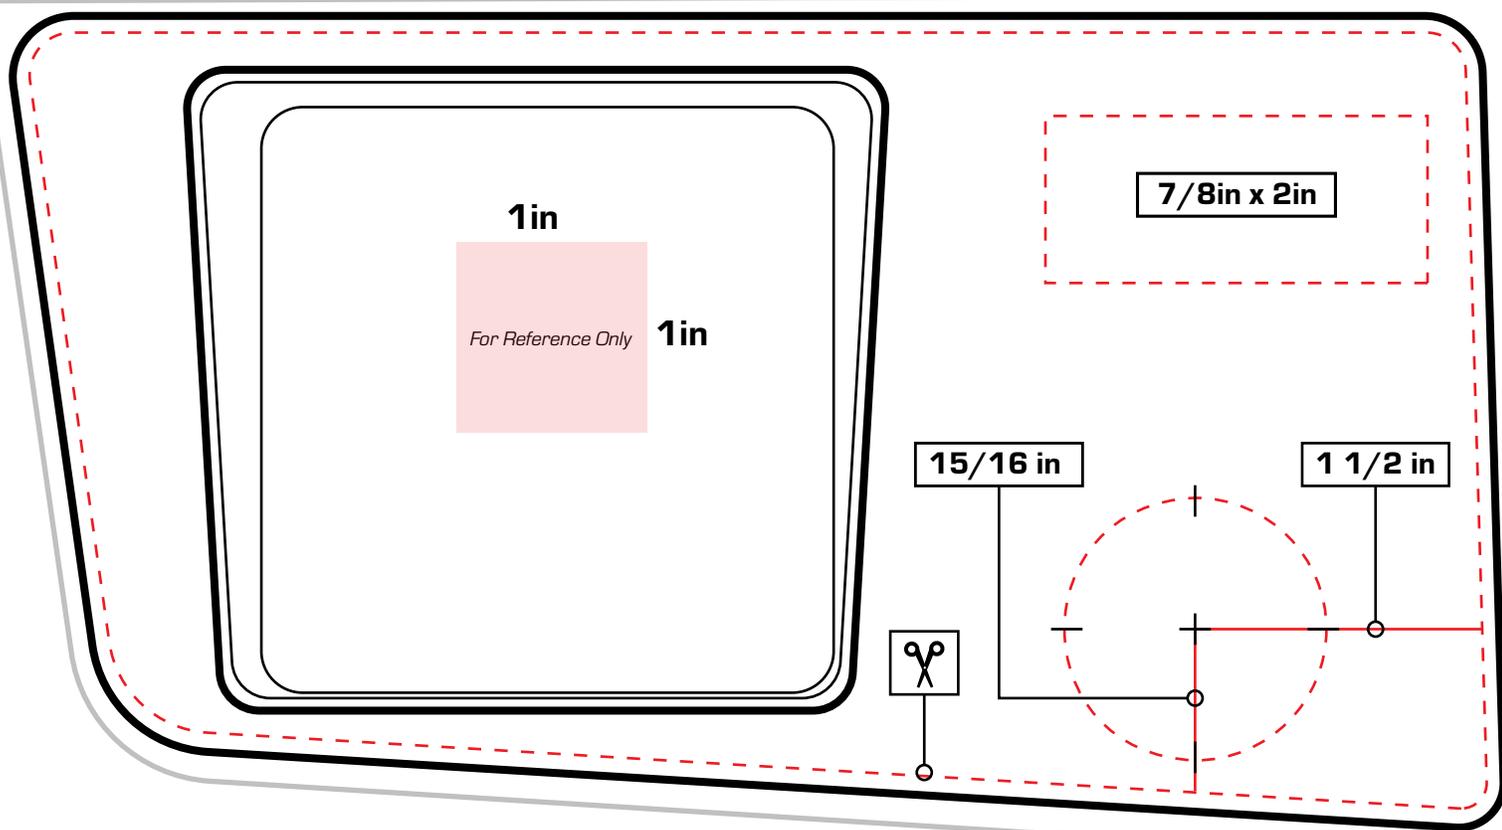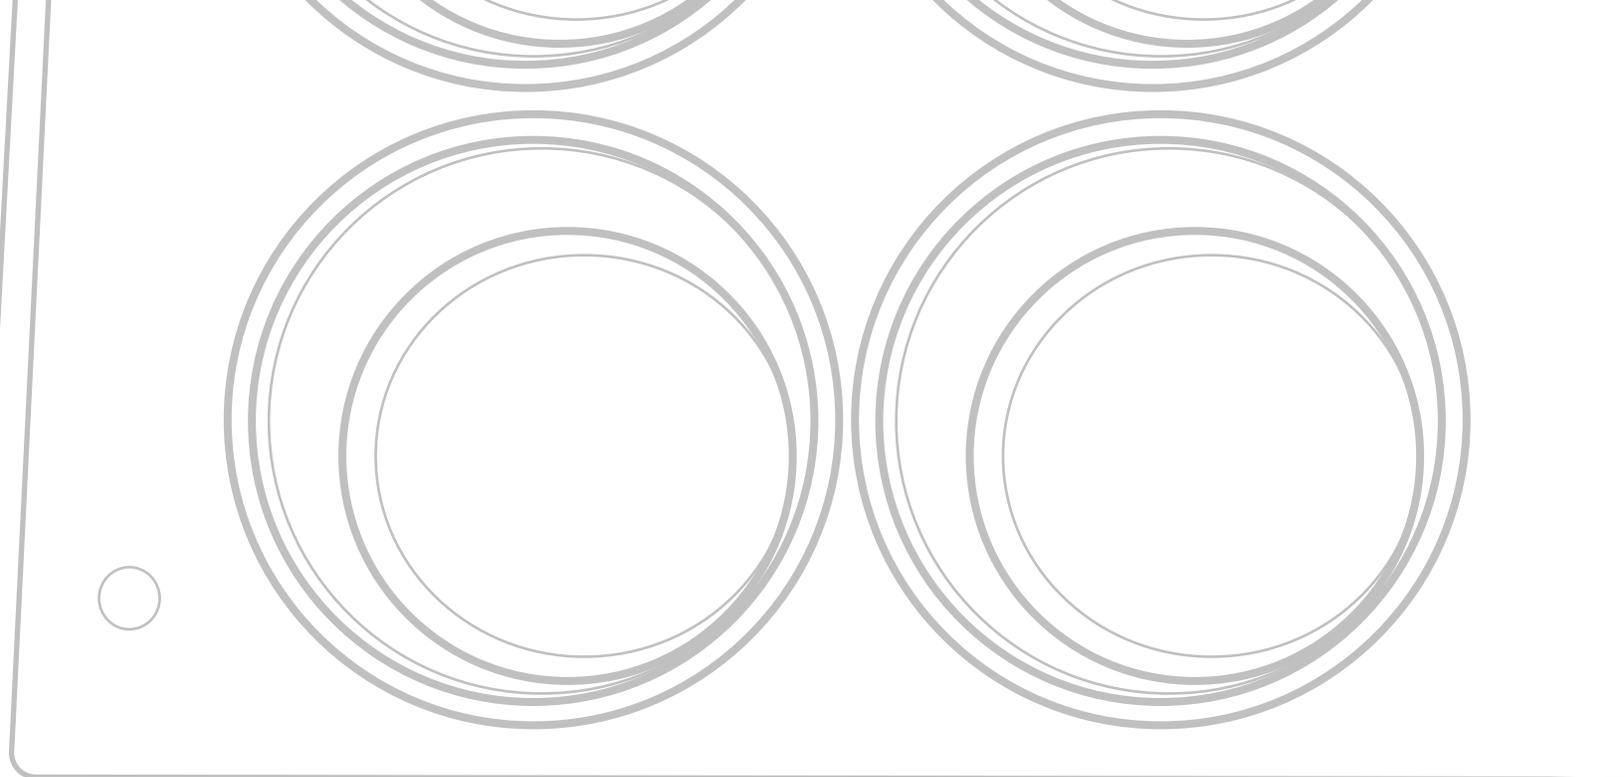

1973-1980 C-10 PickUp

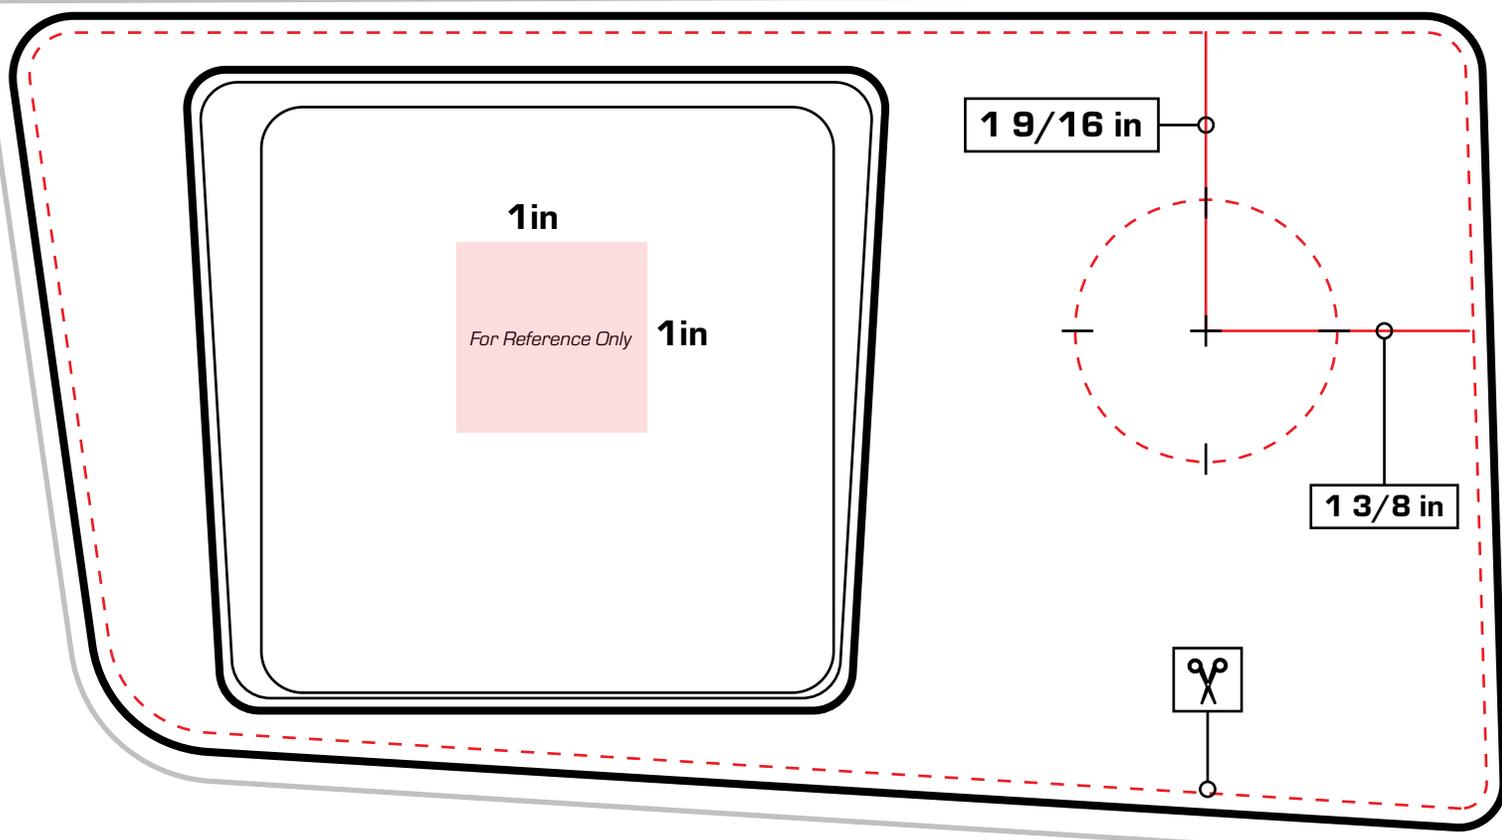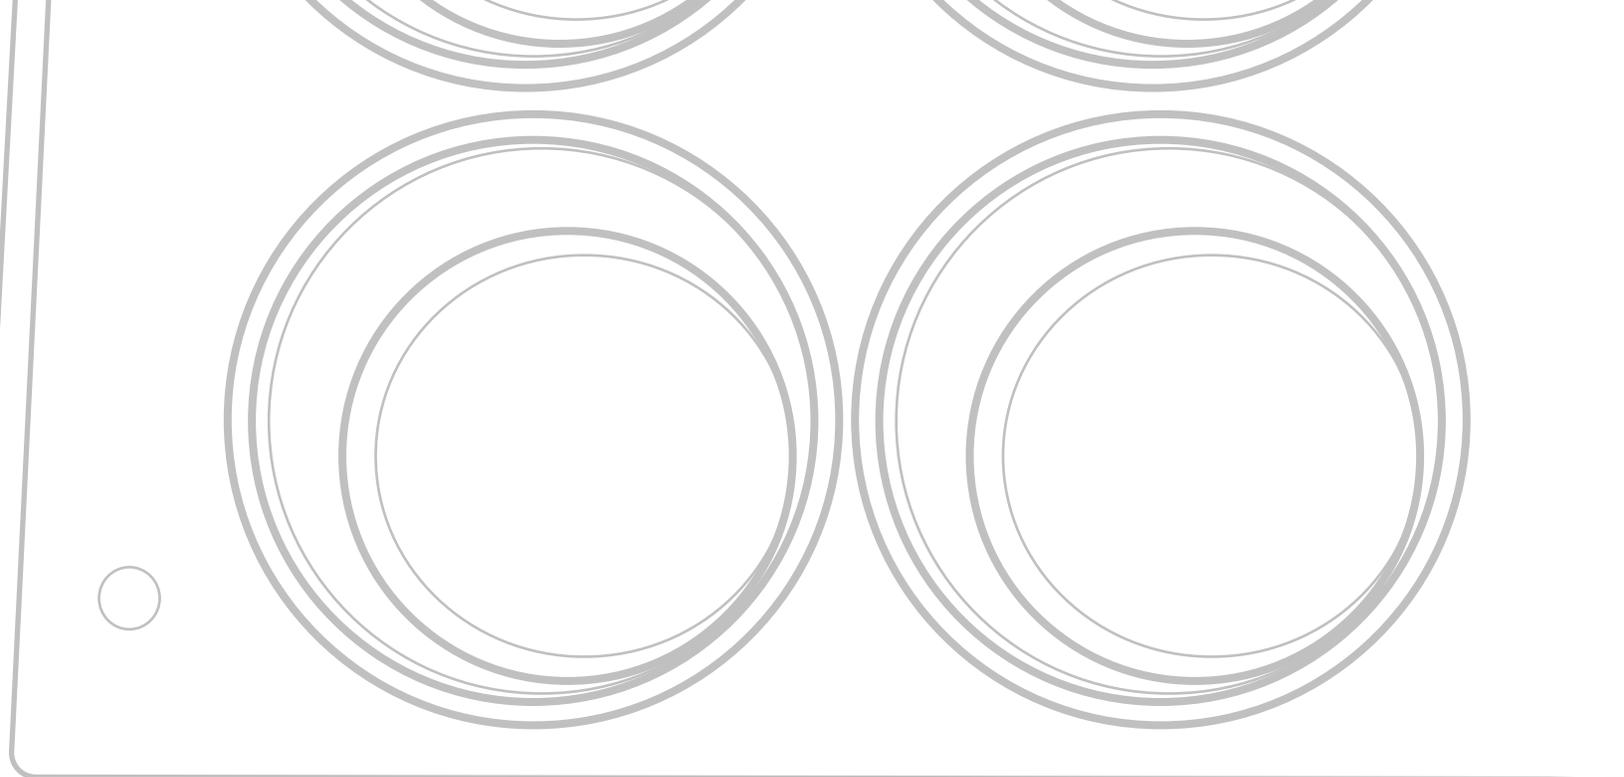

1981-1987 C-10 PickUp